




BOM

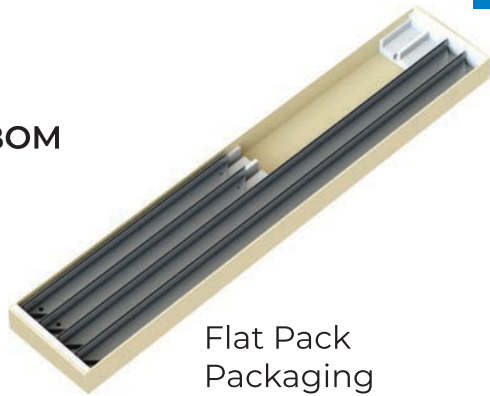

Flat Pack Packaging



Allen Key 3mm X1



Flat Base (if applicable)



Flat Head Allen Bolt (if applicable)



Washer (if applicable)



(Optional) Mounting Bracket x 4



Flat Fitting (if applicable)




Wing Nut (if applicable)



Allen Key 5mm X1 (if applicable)

STEP 1

Place the frame lengths flat on a clean surface, matching the corners as per **Image A**.

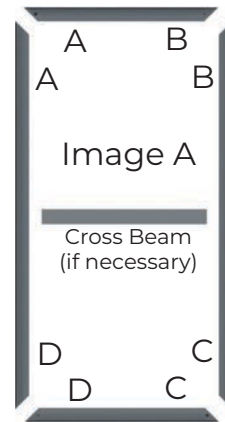


STEP 2

Insert the Male Locking System into the Female Locking System. Secure each corner in place by tightening the set screws with the provided Allen key.




STEP 3 (if applicable)

Place the flat fitting in the center of the profile channel between the two profile lengths. Join the profile lengths together and secure them by tightening the set screws.

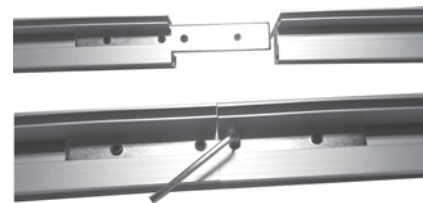

STEP 4 (if applicable)


Insert the Cross Beam lock system into the channel of the frame and center the cross beam to the arrow marked on the sticker attached to the profile.

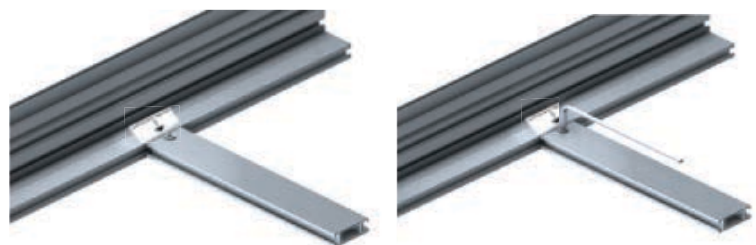




STEP 5 (Option 1)

Align the frame in the desired position and ensure it is level. Drill holes through the frame and into the wall. Insert wall anchors into the drilled holes, then secure the frame to the wall using screws.

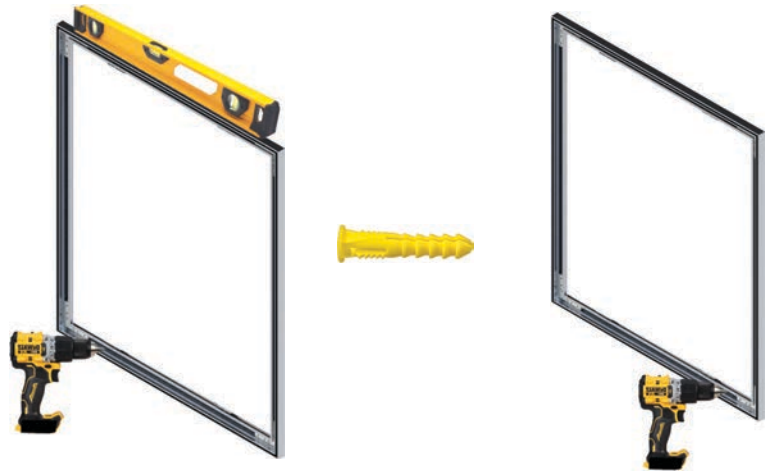

STEP 5 (Option 2)


Measure the dimensions of the inner frame then drill the four corner brackets into the wall at the desired location for the frame.

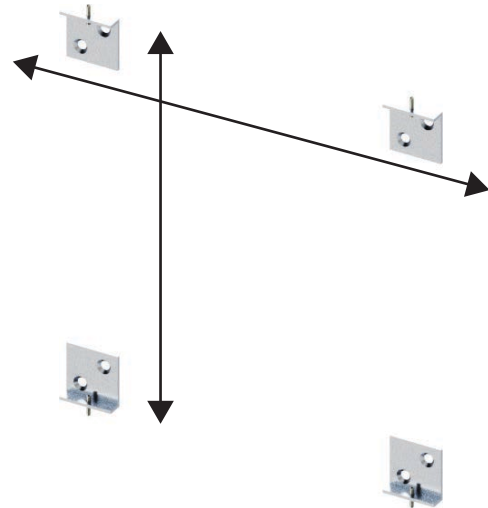

STEP 6 (Option 2)

Position the frame onto the top brackets and adjust the wall mount set screws to level it. Once the frame is aligned, secure it by tightening the bottom brackets.




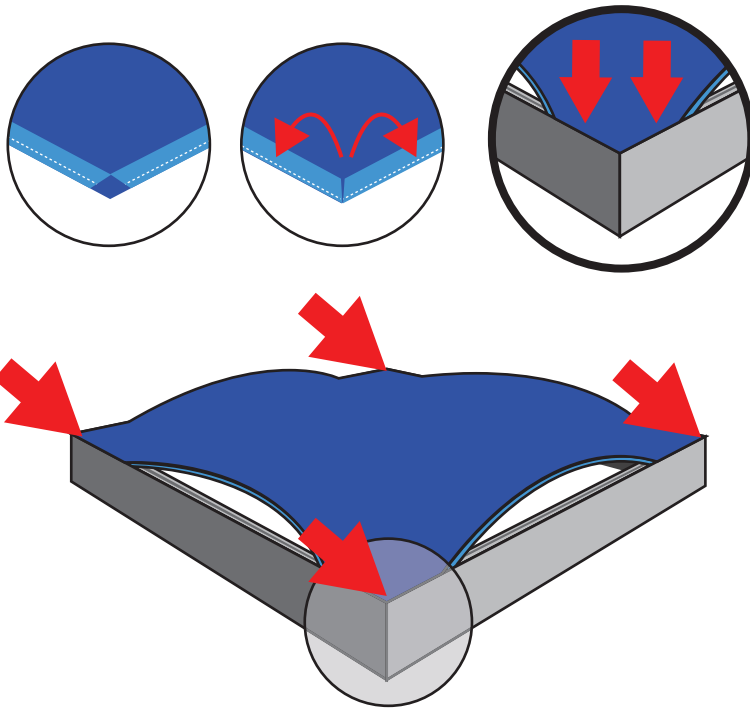


STEP 1

Begin by folding **Corner A** of the graphic, ensuring the silicone strip faces downward with the fabric wrapped over it. Carefully insert the silicone edge into the corresponding corner of the frame. Repeat for **Corner C**, then move to **Corner B**, followed by **Corner D** to complete the installation of all corners.

STEP 2

Insert the silicone strip at the mid-point of all four sides. Then, work outward from each mid-point toward the corresponding corners to complete the installation.

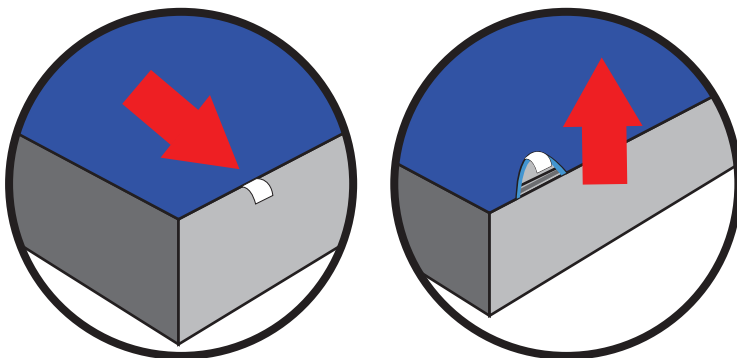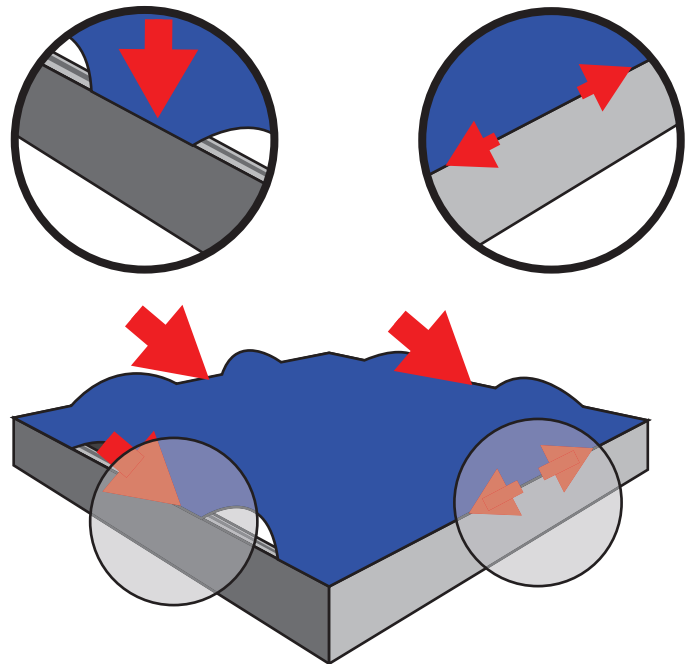

GRAPHIC REMOVAL

Locate the pull tab and gently pull up on the tab.